 


Model

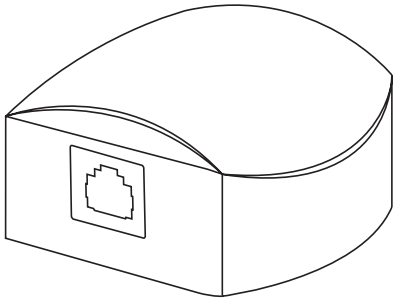

Start-Up

1. Connect the analog telephone jack (slot N in Germany) with the transmitter RTS41.
Attention! Make sure there is no interference with the wireless connection. Do not mount the device in a distribution box, in metal casings, in direct proximity to large metal objects, on the floor or close to it.
2. Teach the RTS41 into a receiver (not contained in the delivery). Put the receiver into teach-in mode according to the operating manual of the receiver.
3. Now call your telephone. Once you receive the call, the RTS41 sends a radio telegram to the receiver and is thus programmed.
4. Terminate the teach-in mode of the receiver according to the operating manual of the receiver.
5. Now test the function of the transmitter RTS41 with the receiver by calling your telephone number again.

RTS41E5001-01

Technical Details

Frequency:	868.3 MHz
Radiated power:	0.40 mW
Modulation:	FSK
Coding:	Easywave
Power supply:	via telephone jack
Current parameter:	1TR 110-1
Ringing frequency:	25 Hz and 50 Hz
Range:	up to 150 m under open field conditions
Degree of protection:	IP20
Operating temperature:	0 °C to +60 °C
Dimensions:	70/64/35 mm
Weight:	32.0 g

Scope of Delivery

Wall-mounted transmitter RTS41, connecting cable RJ11/RJ11, adapter TAE-N/RJ11, attachment material, operating instructions

Intended Use

The Wall-mounted transmitter RTS41 may only be used to operate Easywave radio receivers. The manufacturer shall not be liable for any damage caused by improper or non-intended use.

Safety Advice

 


Before using the device, carefully read through the operating instructions

- Note also the operating instructions of the radio receiver.
- Have faulty radio controls checked by the manufacturer!
- Do not make any unauthorized alterations or modifications to the transmitter!

Function

The stationary transmitter RTS41 serves to forward an analog telephone call to an external Easywave receiver, e.g. RCP04, RCP09 or RCJ01 with operating modes DEAD MAN and TIMER. In case of an incoming call, the RTS41 forwards a radio signal to the call receiver.

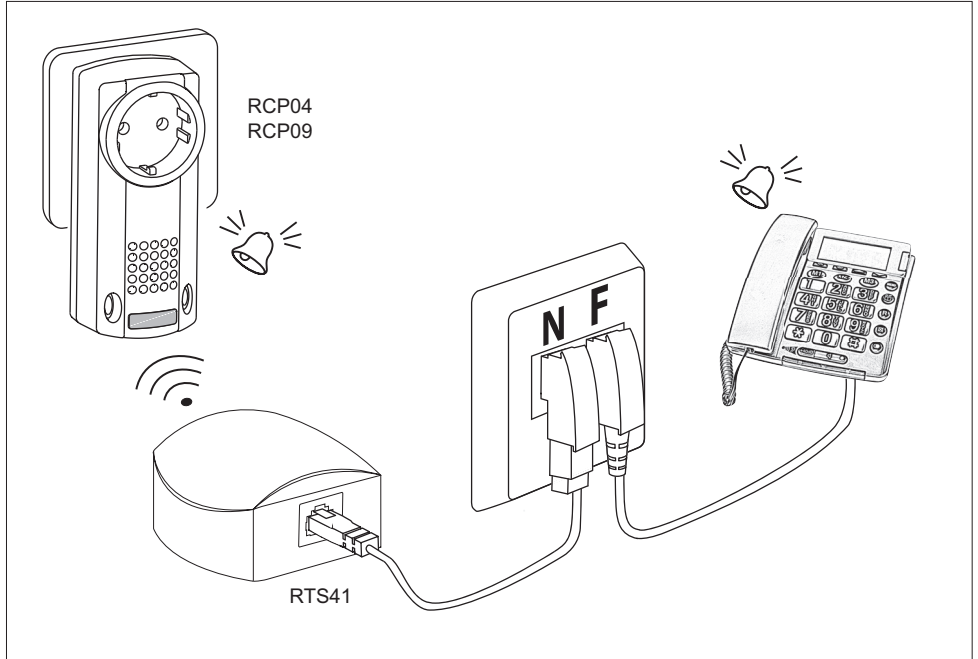

General Information

Disposal

Waste electrical products and batteries not be disposed of with household waste!

Dispose of the waste product via a collection point for electronic scrap or via your specialist dealer. Put the packaging material into the recycling bins for cardboard, paper and plastics.



Warranty

Within the statutory warranty period we undertake to rectify free of charge by repair or replacement any product defects arising from material or production faults. Any unauthorized tampering with, or modifications to, the product shall render this warranty null and void.

Conformity



Hereby, ELDAT GmbH declares that the radio equipment type RTS41 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.eldat.de

Service

If, despite correct handling, faults or malfunctions occur or if the product was damaged, please contact your retailer or the manufacturer:

ELDAT GmbH
 Im Gewerbepark 14
 15711 Königs Wusterhausen
 Germany
 Phone: + 49 (0) 33 75 / 90 37-310
 Telefax: + 49 (0) 33 75 / 90 37-90
 Internet: www.eldat.de
 E-mail: info@eldat.de